

22-Inch Speaker Stands

OWNER'S MANUAL — Please read before using this equipment.


Your easy to assemble RadioShack 22-Inch Speaker Stands can improve your speakers sound by raising them 22 inches off the floor.

To assemble the speaker stands, you need a hammer and a #2 Phillips screwdriver (not supplied).

Warning: Use extreme caution when using a speaker stand around small children. Ensure that the speaker is seated securely on the stand and the stand is stable at all times.

PARTS

Quantity	Description	Quantity	Description
8	1 ⁵ / ₈ -Inch Screws	8	Spike Feet
16	Isolation Pads	8	2 ¹ / ₄ -Inch Screws
2	Tops	2	Front Styrene Strips
4	Center	2	Back Styrene Strips
2	Bases		

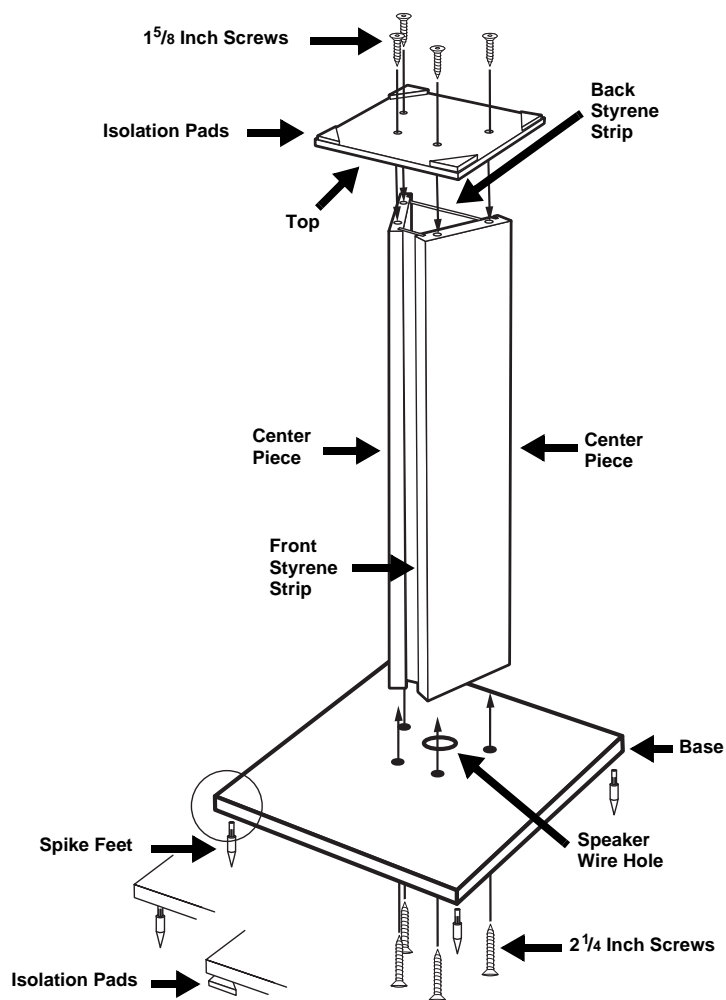

INSTALLING THE SPIKE FEET OR ISOLATION PADS

Place the base on a flat surface with the bottom (unfinished side) facing up.

If you plan to place your speaker stands on carpet, install the supplied spike feet. Besides making the stands more stable, spike feet can also noticeably improve sound, with "tighter" sounding bass, clearer, more defined mids and highs, and enhanced spatial imaging.

Place the flat end of a spike into the hole in each corner of the base and hammer each spike into the base up to its notch.

Otherwise, use the supplied isolation pads to protect bare floors. Remove the paper backing from four of the triangular isolation pads and place a pad 1/8 inch from each corner on the bottom of the base.

ASSEMBLING THE STANDS

Follow these steps to assemble each stand.

1. Turn the base on its side with the unfinished side facing you.
2. Align the two holes in one of the center pieces with the matching holes on the finished side of the base.
3. Thread two 2¹/₄-inch screws through the base and into the center piece. To avoid separation between base and center piece, hold them tightly, then use the Phillips screwdriver to partially tighten the screws.
4. Repeat Steps 2 and 3 for the other center piece.
5. Set the base on the floor with the top (finished side) facing up.
6. Carefully insert the respective styrene strips (matte surface facing out) into the front and back grooves between the center pieces.

Notes:

- The front styrene strip may slip out of its groove when you are attaching the top of the stand. To avoid this, hold the center pieces tightly until you insert the screws into the top of the stand and partially tighten them.
 - It is normal for the back styrene strips to bow when you tighten the screws.
 - If you installed spikes, you can route the speakers wires up through the stands center opening and through the bases hole for added convenience.
7. Align the four holes in the top piece with the matching holes in the mounted center piece then thread two 1⁵/₈-inch screws through each top piece and into each center piece. While holding the center piece tightly, use the Phillips screwdriver to partially tighten the screws.

8. Align the top and base of the stand by setting the stand on its side on a flat surface, then securely tighten all screws.
9. Remove the paper backing from four more triangular isolation pads and place a pad $\frac{1}{8}$ inch from each corner on the top of each speaker stand to protect the bottom of each speaker.
10. Repeat Steps 5–9 for the other speaker stand.

CARE

Keep the speaker stands dry; if they get wet, wipe them dry immediately. Use and store the speaker stands only in normal temperature environments. Handle the speaker stands carefully; do not drop them. Wipe the speaker stands with a damp cloth occasionally to keep them looking new.

POSITIONING THE SPEAKER STANDS

For the best stereo image, place the speaker stands so the distance between them is about the same as the distance between the listening area and the point halfway between the speaker stands.

You might want to experiment with speaker stand placement by placing the connected speakers on the stands to discover the best location for them.

Warning: To avoid injury, always remove the speaker before moving a speaker stand.

If you must place the speaker stands farther apart, turn them slightly inward. If you must place them closer to each other, turn them slightly outward.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99